
Electric Self-propelled Scissor Lift

XE80C

Spare Parts Instruction Manual

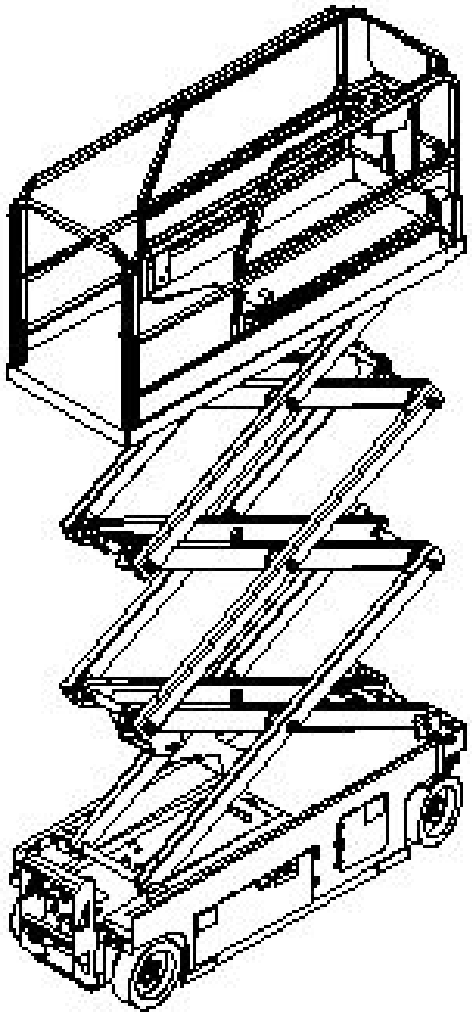



Menu


1. XE80N Decals Diagram----------3
2. XE80N Decals Explanation----------4
3. XE80N Steering Axle and Front Wheel Diagram----------5
4. XE80N Steering Axle and Front Wheel Spare Parts Table----------6
5. XE80N Rear Wheel and Ladder Diagram----------7
6. XE80N Rear Wheel and Ladder Spare Parts Table----------7
7. XE80N Left Side of Chassis Diagram----------8
8. XE80N Left Side of Chassis Spare Parts Table----------9
9. XE80N Right Side of Chassis Diagram----------10
10. XE80N Right Side of Chassis Spare Parts Table----------11
11. XE80N Chassis Pothole Parts Diagram----------12
12. XE80N Chassis Pothole Parts Spare Parts Table----------13
13. XE80N Part 1 of Scissor Boom Diagram----------14
14. XE80N Part 1 of Scissor Boom Spare Parts Table----------14
15. XE80N Part 2 of Scissor Boom Diagram----------15
16. XE80N Part 2 of Scissor Boom Spare Parts Table----------15
17. XE80N Part 3 of Scissor Boom Diagram----------16
18. XE80N Part 1 of Scissor Boom Spare Parts Table----------17
19. XE80N Main Stand Platform and Fence Diagram----------18
20. XE80N Main Stand Platform and Fence Spare Parts Table----------19
21. XE80N Extended Platform and Fence Diagram----------20
22. XE80N Extended Platform and Fence Spare Parts Table----------21


Decals Diagram

Note: The Decals is the same with XE80N

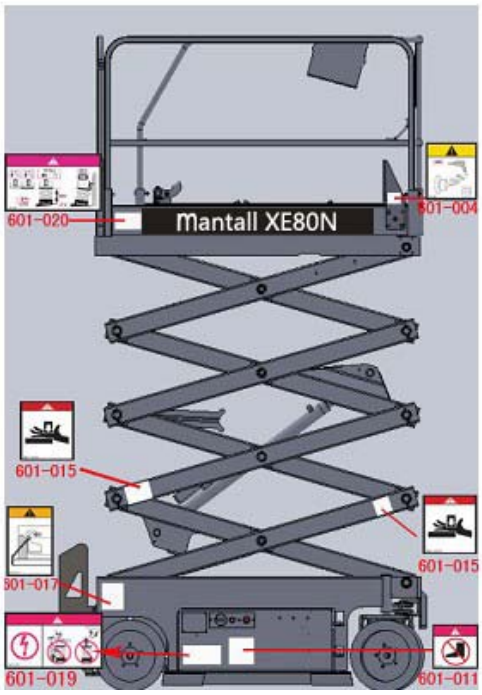

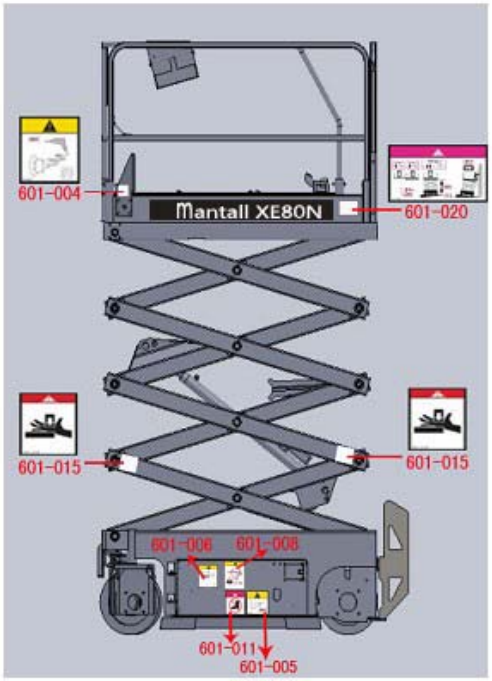

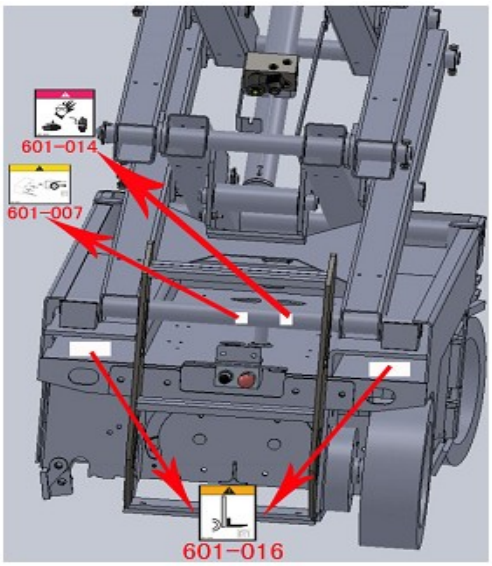


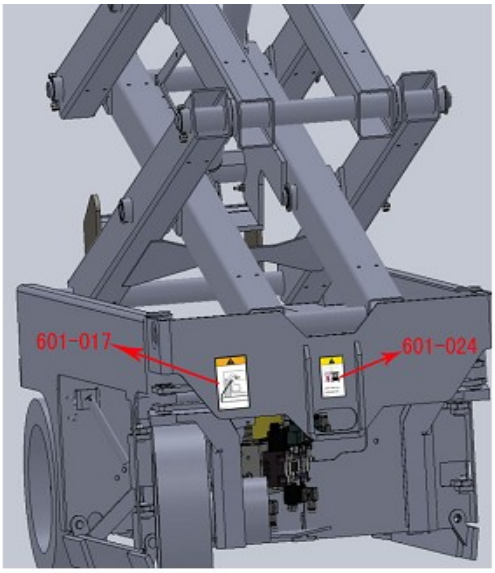

Decals Explanation

Items No.	Decals No.	Decals Explanation	Quantity
1	601-003	Forbid using when charging	1
2	601-004	Upper control power 220V	1
3	601-005	Under control power 220V	1
4	601-006	Electrolyte schematic	1
5	601-007	Hand pump	1
6	601-008	Power prohibit external use and painting	1
8	601-011	Prohibit feet	2
9	601-014	Waterproof and Anti-electric	1
10	601-015	Be careful of rolling hand	2
11	601-016	Forklift holes	2
12	601-017	Traction position	1
13	601-019	Be careful of the top item when lifting Be careful of use on the Thunderstorm days	1
14	601-020	The lift working environment load balance	1
15	601-024	To stand under the device is prohibited	1


Steering Axle Connecting and Front Wheels Diagram

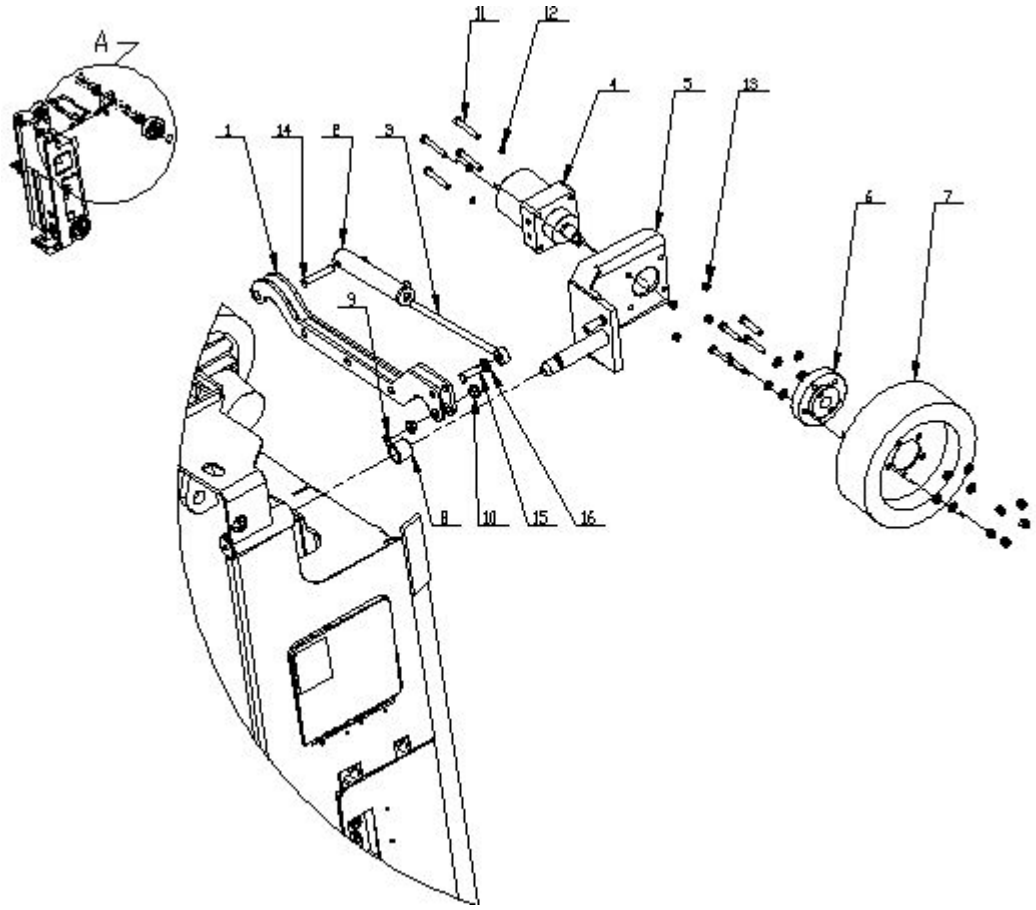

Steering Axle Connecting and Front Wheels Spare Parts Table

Items No.	Spare Parts No.	Spare Parts Name	Quantity
1	021103X048	XEC Steering welding	1
2	051005J019	Steering cylinder 8 meters	1
3	051005J019	Steering oil cylinder Piston cylinder	1
4	051005J020	Drive Motor	1
5	021005J220	Steering wheels welding	1
6	051005J005	6M Motor wheel sets	1
7	051005J008	6M wheels	1
8	021005J053	Rotating under sleeve	1
9	031003C070	GB97.1-2002 gasket M8	1
10	021005J030	Steering levers of paper sets	2
11	031003C098	GB5783-2000 screw bolt M12X80	8
12	031003W009	GB95-1985 gasket M8	12
13	031005J009	GB6182-2000 self-locking nut M10	8
14	031005J029	GB882-2002 B type pin axis 18X90	1
15	021005J031	Steering lock pin	1
16	031003C068	GB97.1-1985 gasket M20	1


Ladders and Rear Wheels Diagram

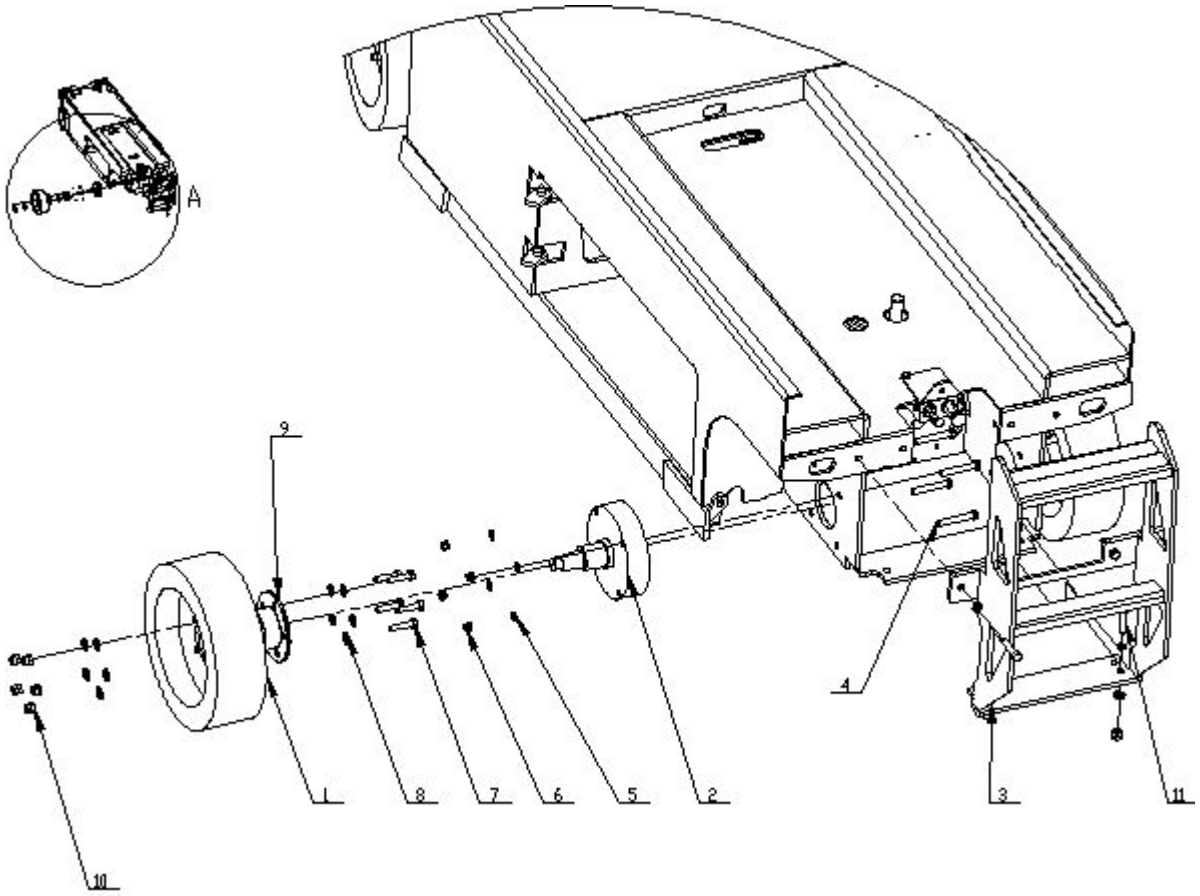

Ladders and Rear Wheels Spare Parts Table

Item No.	Spare parts No.	Parts name	Quantity
1	051005J008	6M wheels	1
2	051005J021	Braker	1
3	021103X053	XEC ladder	1
4	031003C098	GB5783-2000 Screw bolt M12X80	4
5	031005J038	GB95-1985 Gasket M10	8
6	031005J009	GB6182-2000 Self-locking Nut M10	8
7	031003C008	GB5782-2000 Screw bolt M12X50	5
8	031003W008	GB95-1985 gasket M12	10
9	051005J004	6M Braker sleeve	1
10	031005J041	GB6175-2000 self-locking nut M12	5
11	031005J214	GB5782-2000 Screw bolt M12X55	4

The left side of Chassis

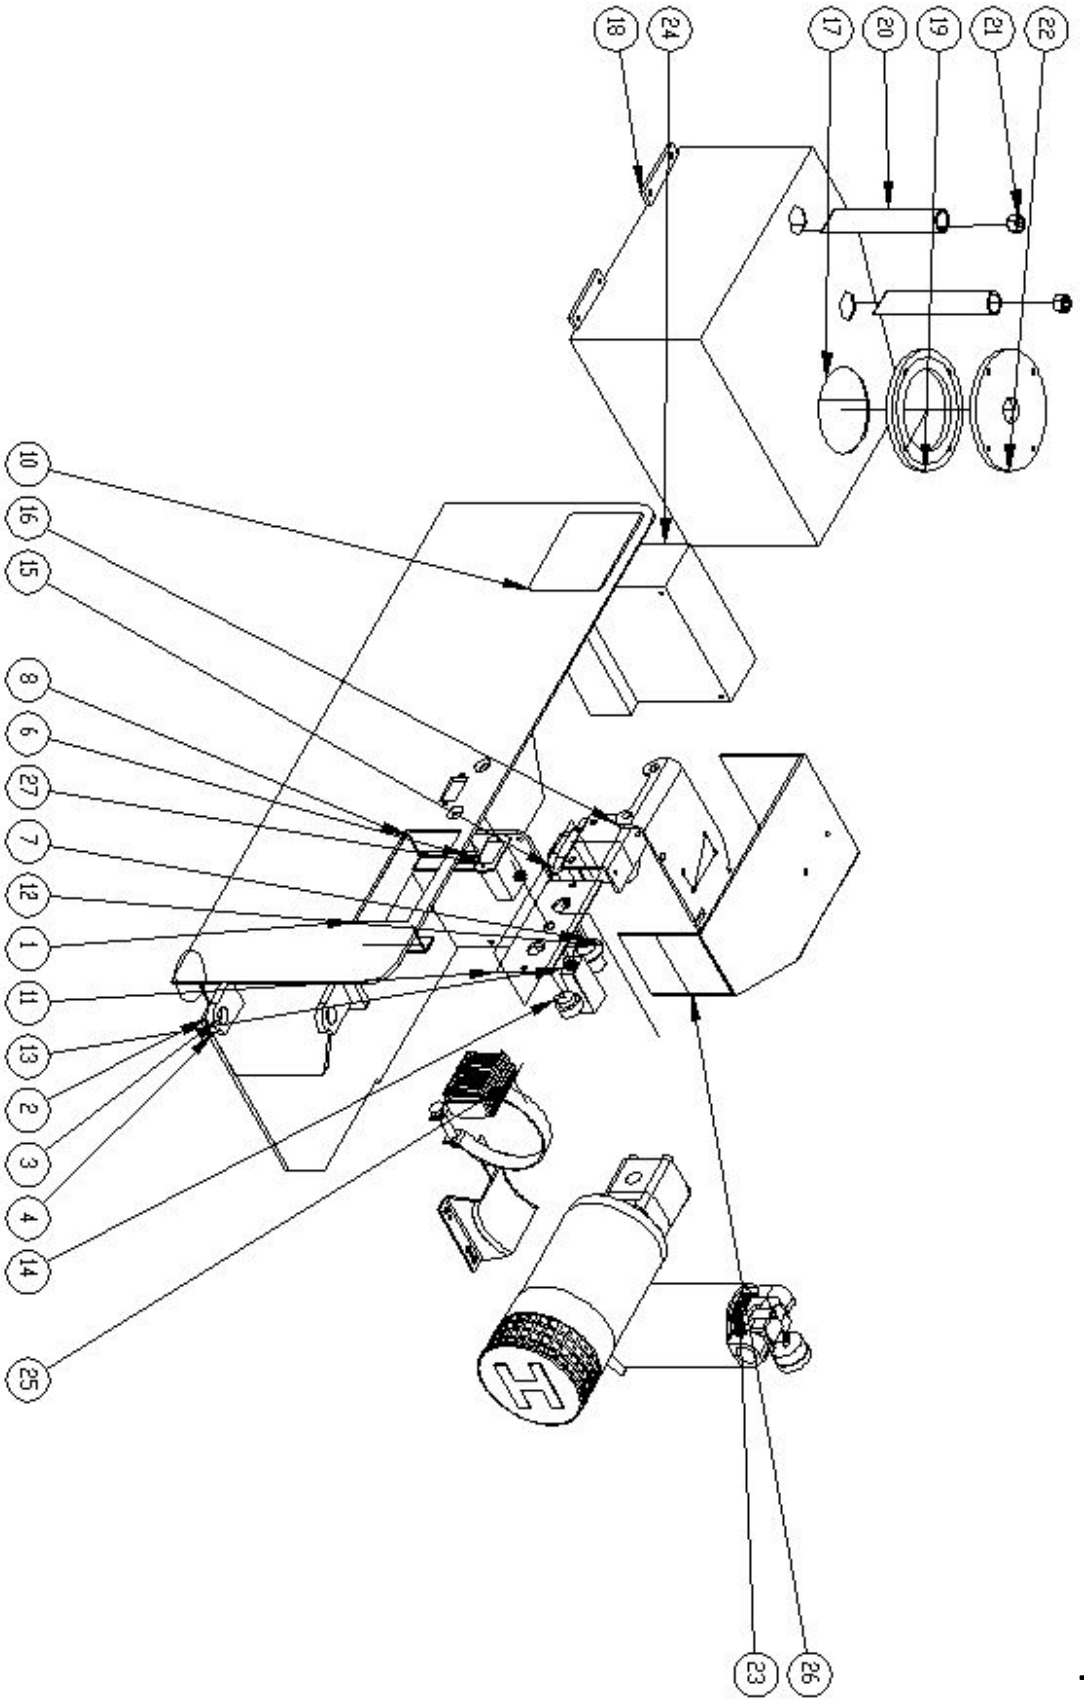


T

The left side of Chassis Spare Parts Table

Item No.	Spare parts No.	Parts name	Quantity
1	021005J194	Side door	1
2	021005J195	Side bottom door	1
3	021005J196	Side end door	1
4	021005J189	Side door hinge	2
5	021005J197	Side door control	1
6	021005J198	Under control welding plate	2
7	021005J284	Controller welding plate	1
8	021005J199	Under control welding upper plate	1
9	021005J283	Side door wire ring	1
10	051005J015	Door lock	1
11	021005J200	6m Ground control box plate	1
12	051003C062	Emergency stop button	1
13	021005J200	Toggle switch	1
14	051003C063	3 position toggle key switch	1
15	051005J028	Motor connecting	1
16	021005J243	SJJ10.3-019 Controller Installation plate)	1
17	021005J182	Oil tank	1
18	021005J183	SJJ10.3.11-04 Oil tank fixed plate	2
19	021005J184	SJJ10.3.11-03 Oil tank welding figthen gasket	1
20	021005J260	SJJ10.3.11-07 Oil tank pull in and out welding tube	2
21	021005J181	hexagon nut C GB-T 41-2000 - M12-N	2
22	021005J206	SJJ10.3-024 Oil tank dust cover	1
23	051005J065	Sofia Filter	1
24	051005J023	Controller	1
25	051005J029	Ground connecting terminals	1
26	021005J285	Under control cover plate	1
27	051005J026	Battery display	1


The Right side of Chassis

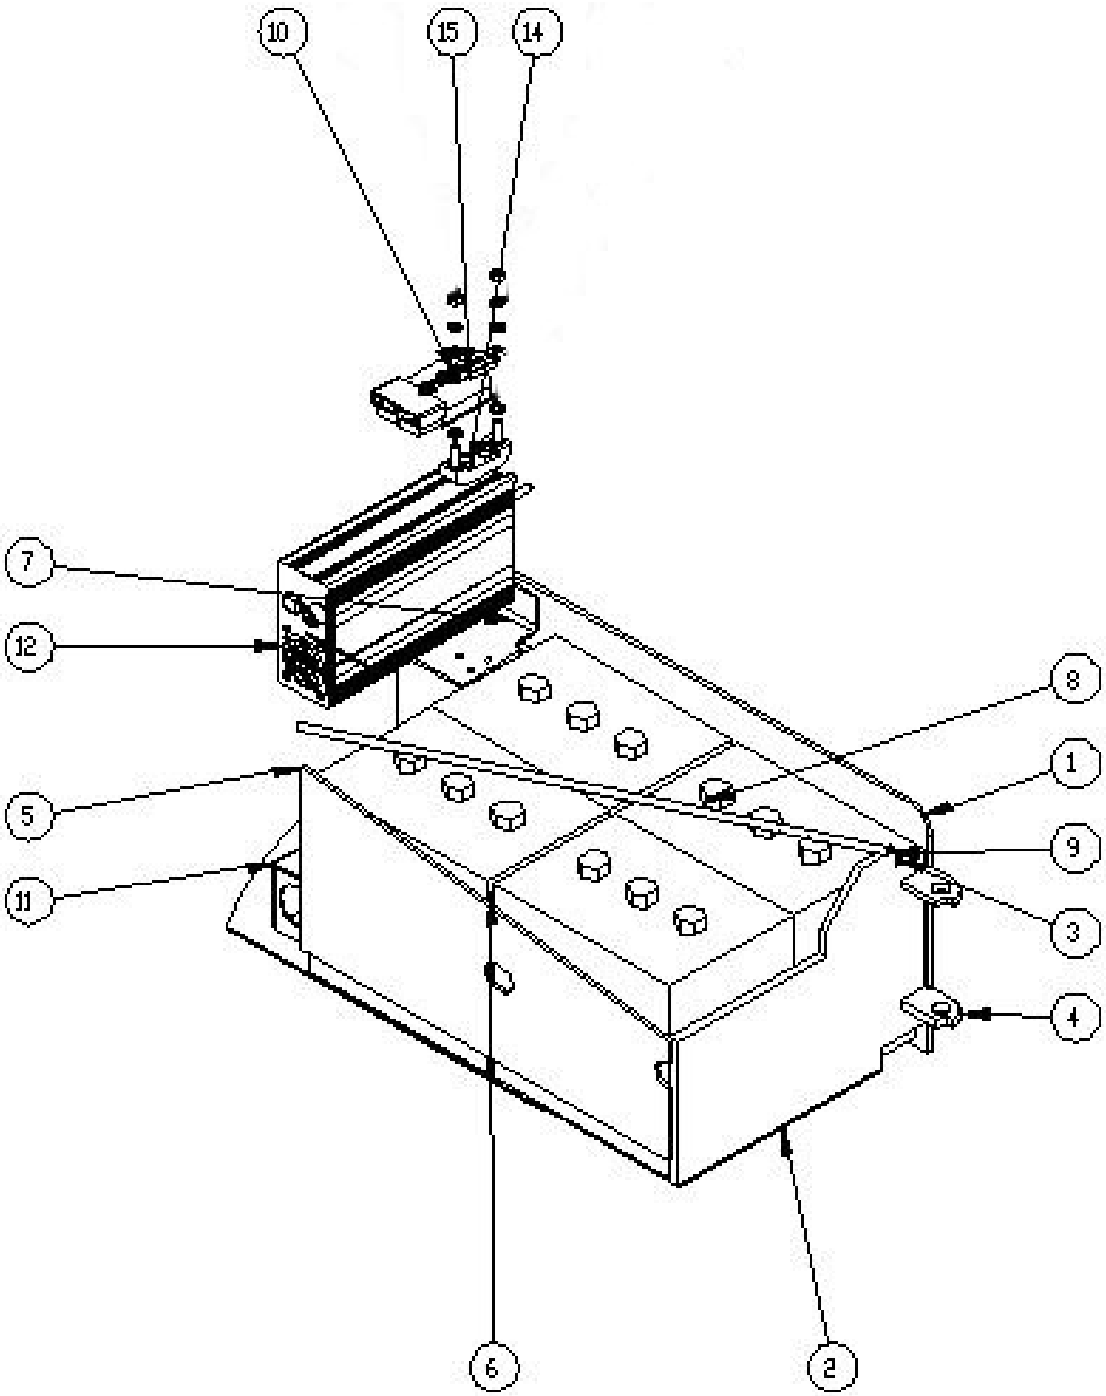

The Right side of Chassis Spare Parts Table

Item No.	Spare parts No.	Parts name	Quantity
1	021005J186	Left side door	1
2	021005J187	Side bottom door	1
3	021005J188	Side door battery	1
4	021005J189	side door hinge	2
5	021005J190	Battery guard board	1
6	021005J191	Battery baffle	2
7	021005J204	Double insert fixed plate	1
8	051005J027	Battery	4
9	021005J259	Battery block stick	1
10	051005J041	Double insert	1
11	021005J254	Charger protection plate	1
12	051005J040	Charger	1
13	051005J015	Door lock	1
14	051005J028	Insurance base	1
15	051005J028	Insurance plate	1


Chassis Pothole Parts Diagram

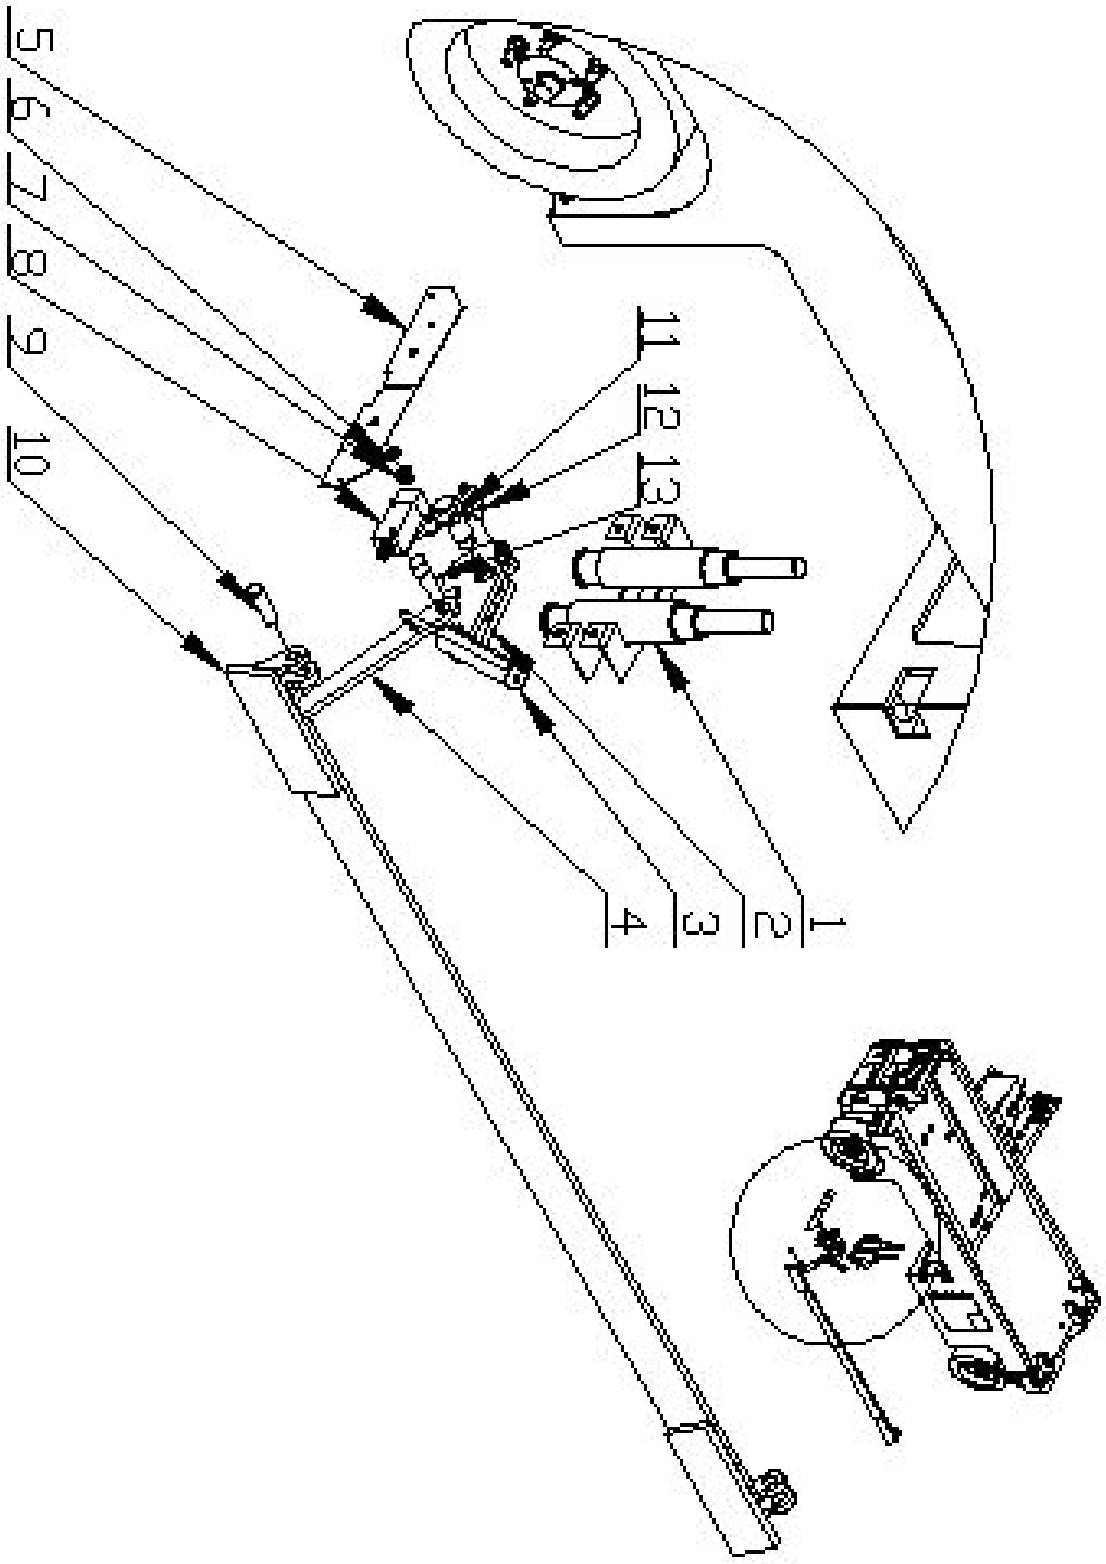

Chassis Pothole Parts Spare Parts Table

Item No.	Spare parts No.	Parts name	Quantity
1	021103X049	XEC Pothole Guiding devices	1
2	021005J213	Pothole rocking bar welding	2
3	051005J011	Gas cylinder	1
4	021005J169	Long plate	1
5	031005J038	GB/T95-1985 Gasket M10	20
6	031003C052	GB682-2000 Self-locking nut M10	12
7	051005J063	limit switch	2
8	031005J025	Pothole lock pins	4
9	021103X050	XEC Pothole plate welding	2
10	031005J011	Pulley pin	2
11	021005J029	Nylon pulley	2
12	031005J025	Pothole Rotation fixed axle	2
13	021005J026	Antirust paper set	2


Part 1 of Scissor Boom Diagram

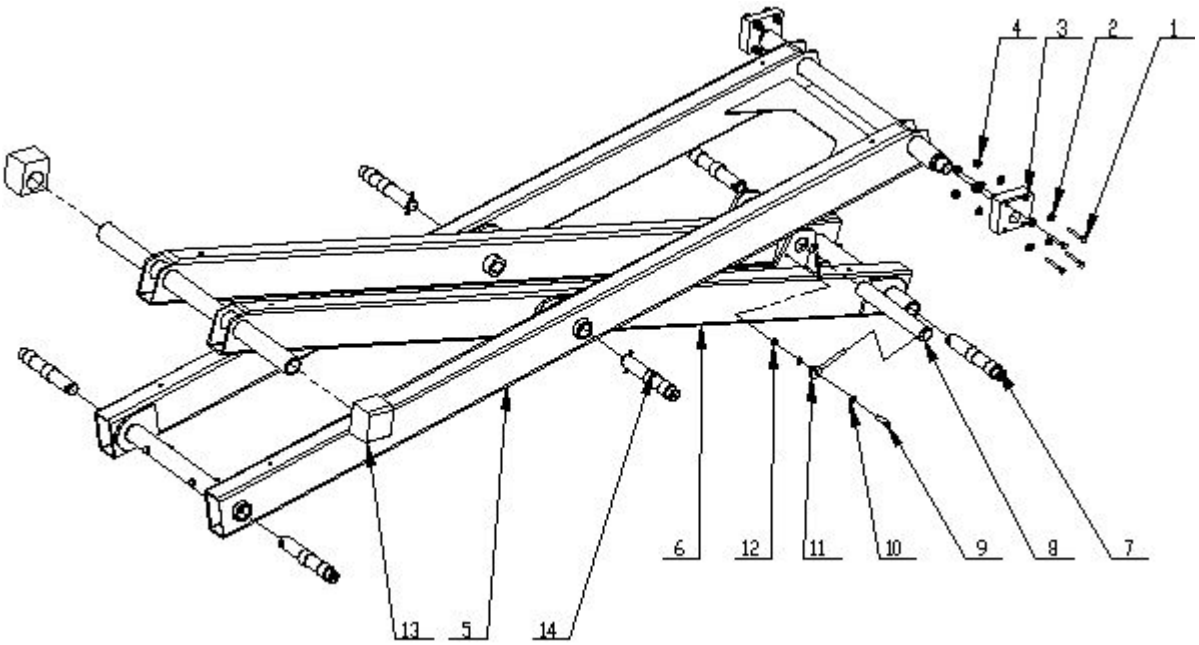

Part 1 of Scissor Boom Spare Parts Table

Item No.	Spare parts No.	Parts name	Quantity
1	031005J203	GB5783-2000 Screw bolt M8X60	4
2	031005J038	GB95-1985 gasket M10	8
3	021005J037	Scissor boom fixed plate	1
4	031005J009	GB6182-2000 Self-locking nut M10	3
5	021103X058	Inspection supporting boom	1
6	021103X059	XEC middle 2 scissor boom assembly	1
7	021006J002	long lock pin assembly	4
8	021005J016	Oil cylinder chassis lock axle	1
9	031005J238	GB6783-2000 screw bolt M8X40	1
10	051005J007	Axle limit position pin	2
11	031003W009	GB95-1985 gasket M8	1
12	031005J039	GB6182-2000 self-locking nut M8	1
13	021005J039	Upper slice plate	2
14	021006J003	Hinge mediate pin axis assembly	2


Part 2 of Scissor Boom Diagram

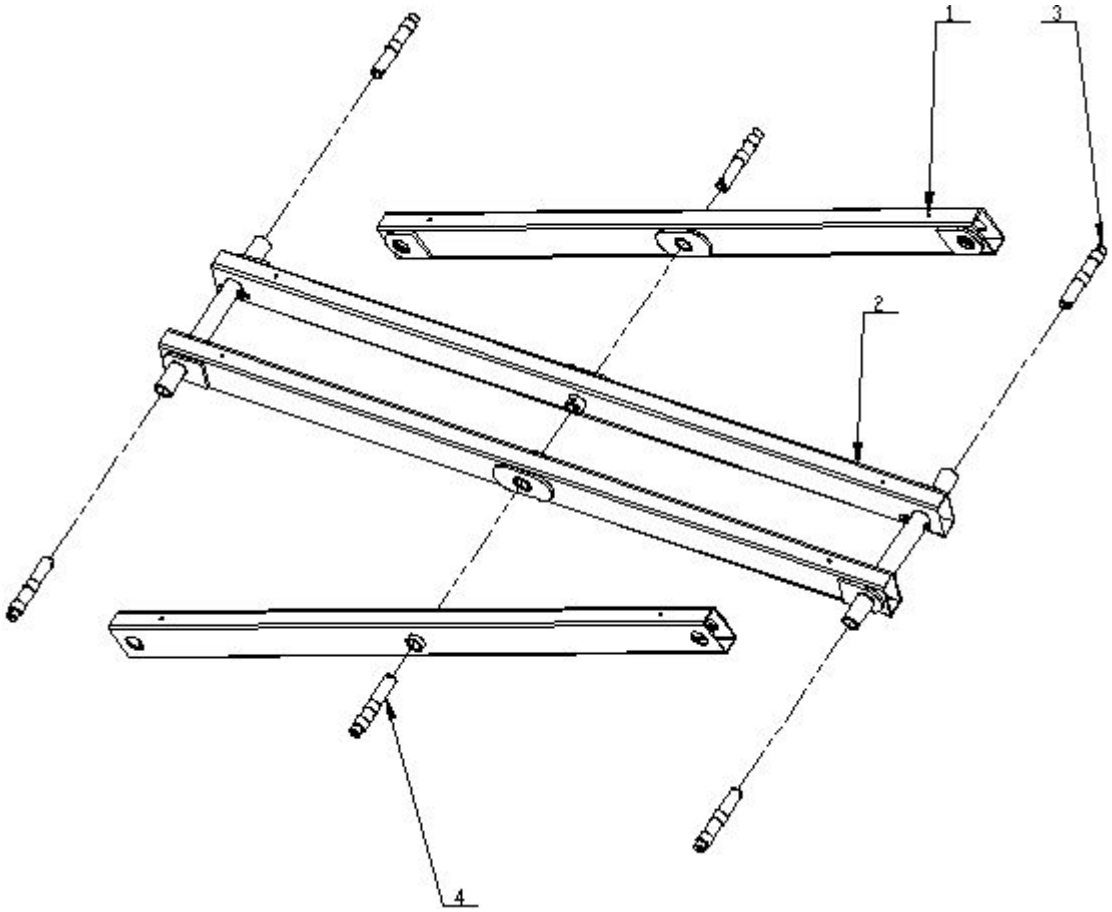

Part 2 of Scissor Boom Spare Parts Table

Item No.	Spare parts No.	Parts name	Quantity
1	021103X059	XEC Left scissor boom 2 assembly	2
2	021103X056	XEC scissor boom mediate 3 assembly	1
3	021006J002	Hinge long pin axis assembly	4
4	021006J003	Hinge mediate pin axis assembly	2


Part 3 of Scissor Boom Diagram

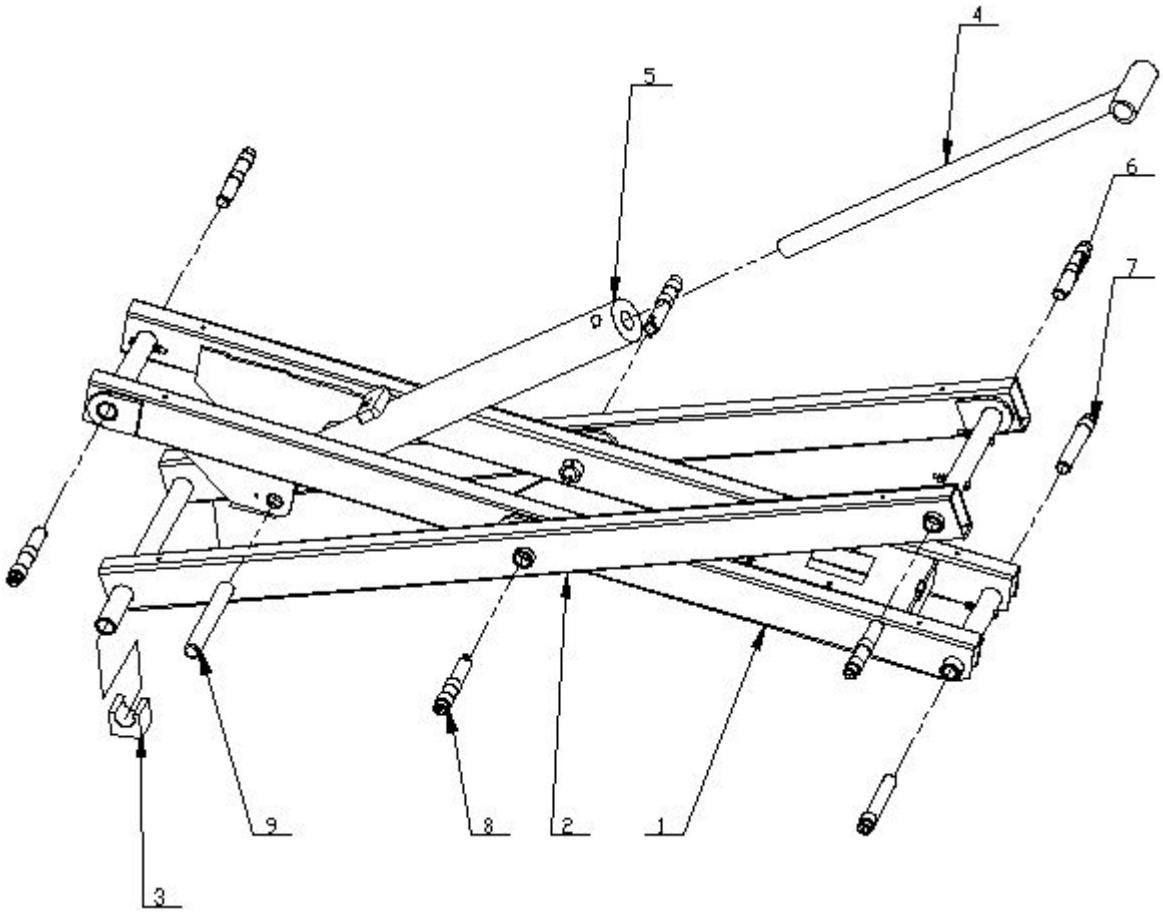

Part 3 of Scissor Boom Spare Parts Table

Item No.	Spare parts No.	Parts name	Quantity
1	021103X055	XEC scissor boom mediate 4 assembly	1
2	021103X054	XEC scissor boom mediate 5 assembly	1
3	021005J038	Scissor boom slice plate	2
4	051005J018	Oil cylinder piston rod	1
5	051005J018	Oil cylinder body	1
6	021006J002	Hinge long pin axis assembly	4
7	021006J001	lock pin bottom assembly	2
8	021006J003	Hinge mediate pin axis assembly	2
9	021005J016	Oil cylinder chassis lock pin axle	1


Main Stand Platform and Fence Diagram

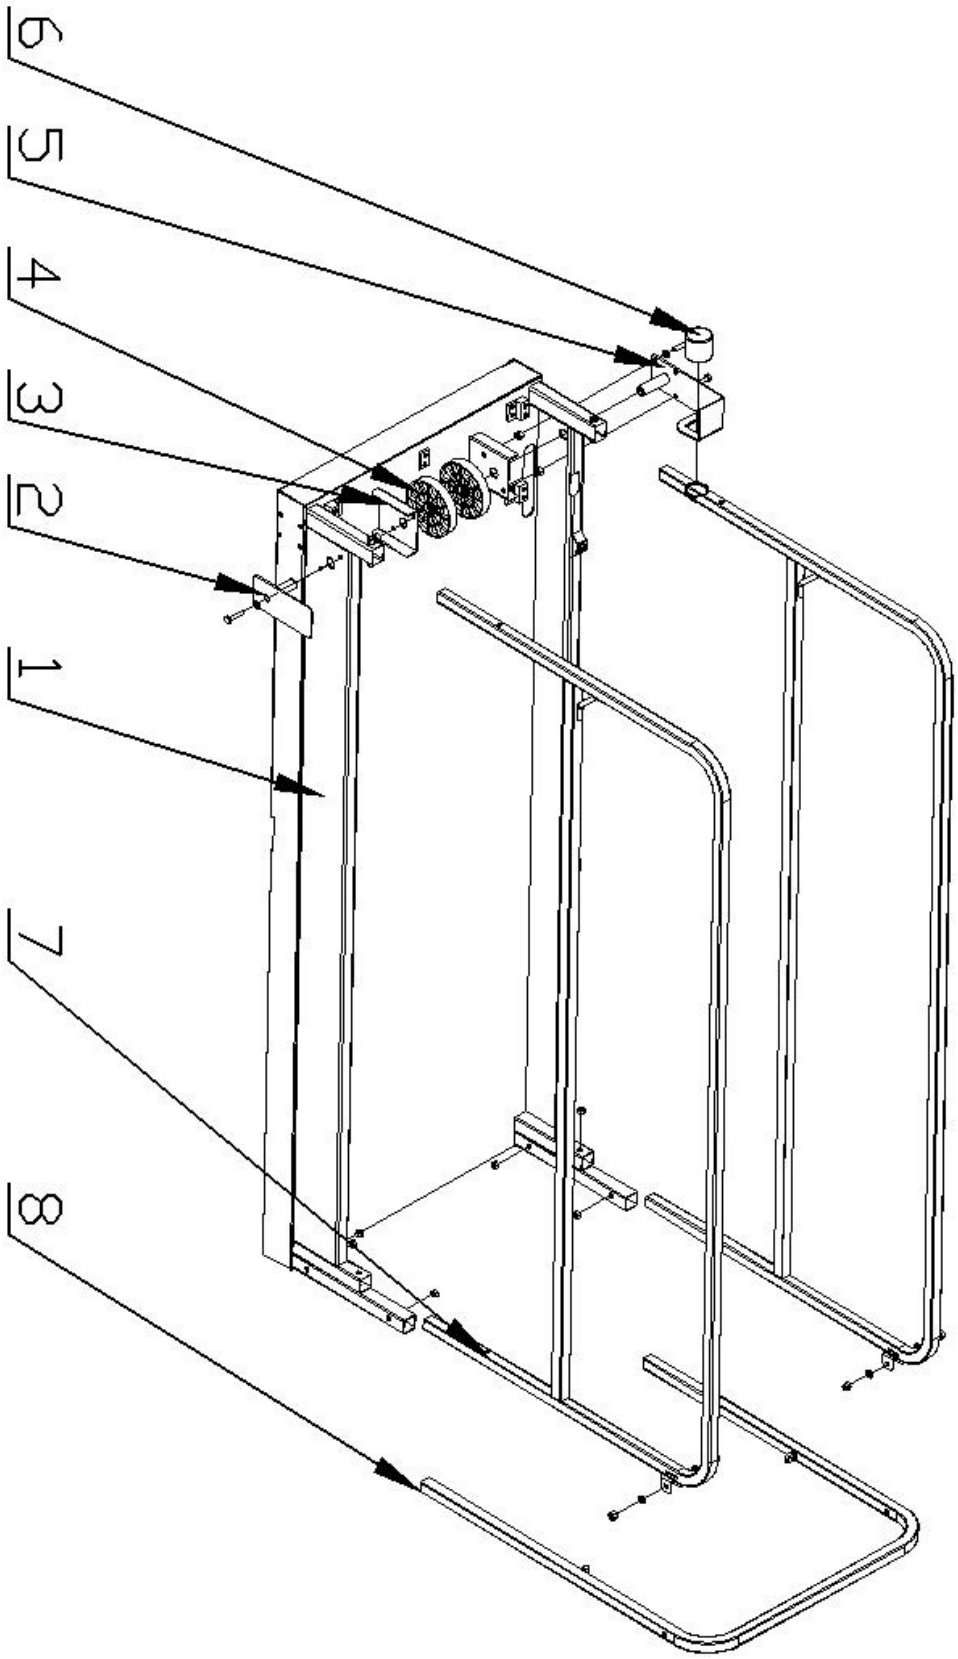

Main Stand Platform and Fence Spare Parts Table

Item No.	Spare parts No.	Parts name	Quantity
1	021103X046	XEC main stand welding	1
2	021005J224	Left wheel base welding	6
3	021103X017	Right slideway supporting plate	2
4	021005J044	Pulley	2
5	021005J225	Right wheel base welding	1
6	021103X152	XEC Socket back cover	1
7	021103X062	XEC Side guardrail welding	3
8	021103X061	XEC bottom guardrail welding	2

Extended Platform and Fence Diagram

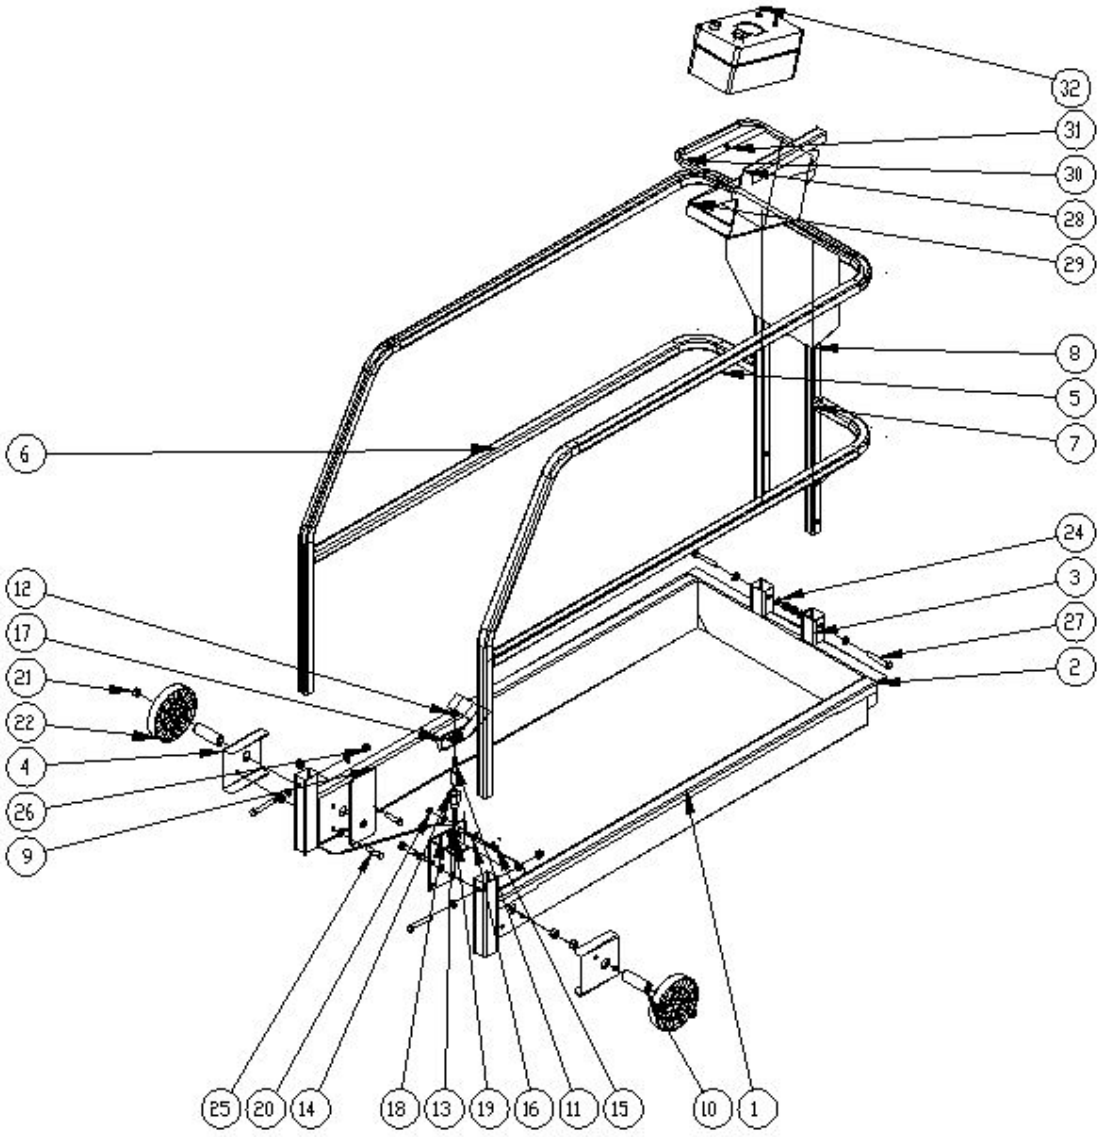

Extended Platform and Fence Spare Parts Table

Items no.	Spare Parts no.	parts name	Quantity
1	021103X018	XEC back board	1
2	021103X019	XEC side baffle	1
3	021005J109	Vertical trusteeship	4
4	021103X017	Right sliding way inside plate	2
5	021103X002	Upper Fence frame rack	1
6	021103X001	XEC Middle Fence frame rack	2
7	021005J100	fence frame vertical pipe	2
8	021005J129	fence frame square board	1
9	021005J142	Wheel fixed board	1
10	021005J009	Wheel axle	2
11	051005J007	Limit pin roll	1
12	031005J007	Hexangular thin nut M12-N	1
13	021005J180	Limit spring	1
14	051005J006	Limit vessel	1
15	021005J005	Axis pin roll bolt	1
16	021005J045	Plastic borehole jack	1
17	021005J144	Limit baseboard	1
18	021005J143	Wheels limiting	1
19	031005J006	Hexangular thin nut M20-N	1
20	031005J207	Hexangular thin nut M8-N	1
21	021005J014	Jacking block	2
22	021005J044	Pulley	2
23	021005J040	Middle gleithretter	1
24	031005C063	Flat Gasket C level GB-T 95-2002 - 10	12
25	031003C016	Hexangular screw bolt C level GB-T 5780-2000 - M10X45-N	4
26	031005J042	2 style nonmetal insert hexangular self-locking nut GB-T 6182-2000 - M10-N	4
27	031005J002	Hexangular screw bolt M10X70-N	4
28	021005J245	Upper control hanging plate	1
29	021005J246	Manual control welding protection board	1
30	021005J247	Guardrail steel bar	1
31	021005J241	Manual control welding dabber	1
32	051005J042	Upper control box	1